


# INSTALLATION INSTRUCTIONS

## 6 X 10 PUSH BUTTON CENTER LOCK DL610LC, DL610RC, DL611LC, DL611RC


★ REFERS TO L1000 INSTALLATION INSTRUCTION  
HANDBOOK FROM ILCO UNICAN

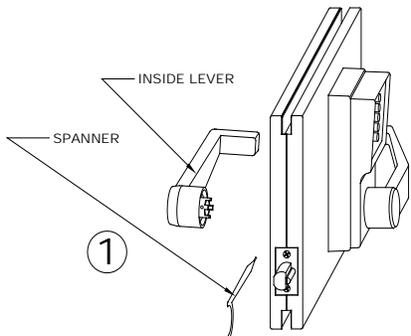

1

REMOVE INSIDE LEVER BY INSERTING POINT OF SPANNER INTO POKEHOLE IN COLLAR OF DRIVE SLEEVE AND DEPRESSING RETAINING CLIP.

★ SEE STEP 10. INSTALLING INSIDE LEVER

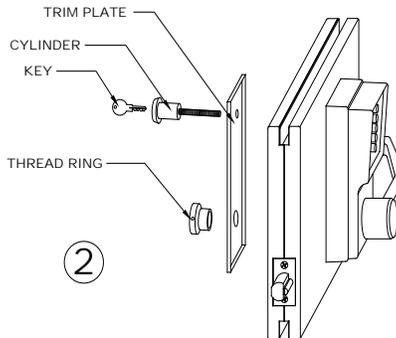


2

REMOVE CYLINDER BY INSERTING KEY AND ROTATING CYLINDER ANTI-CLOCKWISE UNTIL IT IS FREE.

★ SEE STEP 11. INSTALLING COMBINATION CHANGE PLUG ASSEMBLY

REMOVE INSIDE TRIM PLATE BY UNSCREWING THREAD RING FROM DRIVE UNIT.


★ SEE STEP 9. INSTALLING INSIDE TRIM PLATE.

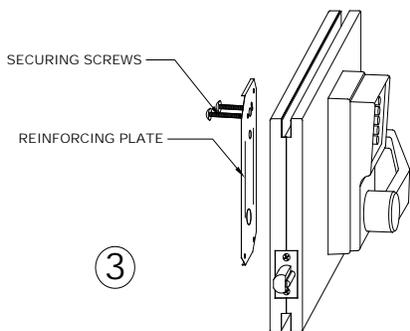

3

REMOVE REINFORCING PLATE BY UNSCREWING THE TWO SECURING SCREWS


★ SEE STEP 7. INSTALLING REINFORCING PLATE.

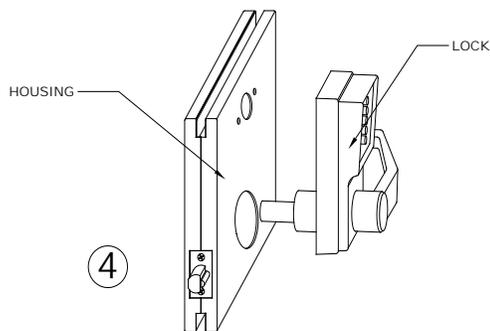

4


REMOVE LOCK BY SLIDING IT FROM THE HOUSING.

★ SEE STEP 5. INSTALLING LOCK.

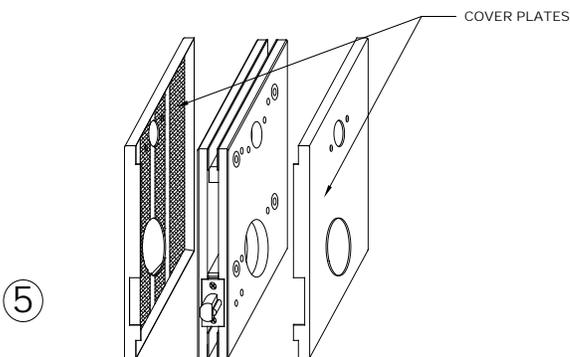

5

REMOVE COVER PLATES

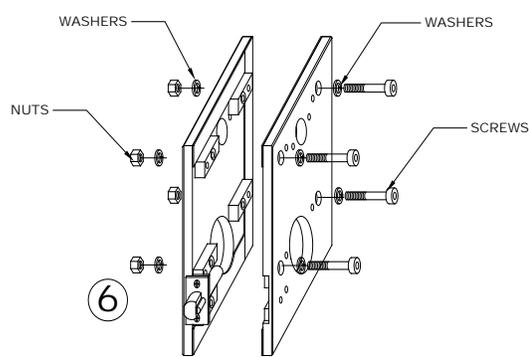

6


SEPARATE CLAMP PLATES BY REMOVING 4 CAP HEAD SCREWS NUTS AND WASHERS.




# INSTALLATION INSTRUCTIONS

## 6 X 10 PUSH BUTTON CENTER LOCK


### DL610LC, DL610RC, DL611LC, DL611RC

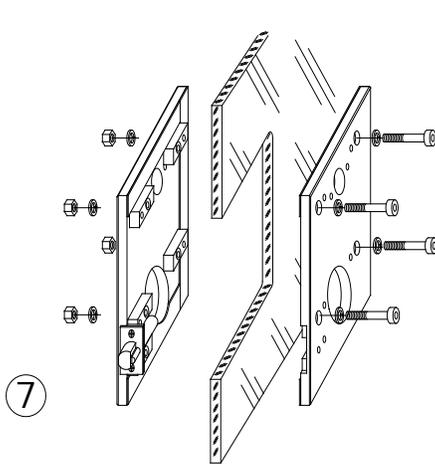


7  
ASSEMBLE CLAMP PLATES ONTO GLASS.  
BE SURE TO HAVE NUTS AND WASHERS ON THE OUTSIDE

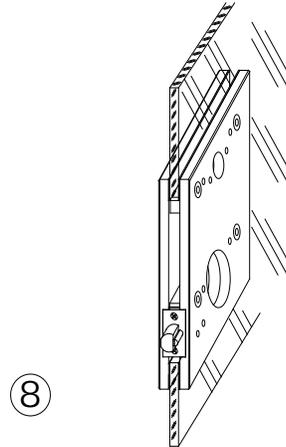

8  
NOTE: BEFORE FINALLY TIGHTENING, TEST INSTALL THE  
COVER PLATES TO ENSURE ALIGNMENT WITH GLASS.

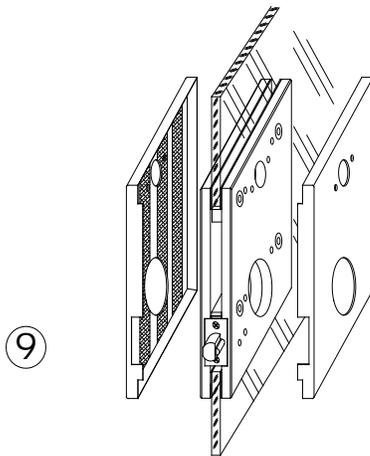

9  
REMOVE VHB TAPE COVER PAPER  
CAREFULLY APPLY COVER PLATES ENSURING HOLES  
AND LOCK FACE PLATE LINE UP. PRESS ON FIRMLY.

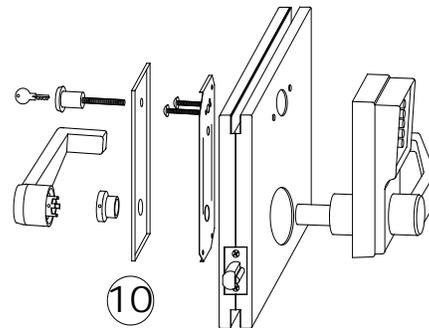

10  
RE-ASSEMBLE LOCK AND HARDWARE.

