


INSTALLATION INSTRUCTIONS

MODELS D1025 AND D1026

FAWN MODEL PASS-THRU WITH SCREEN

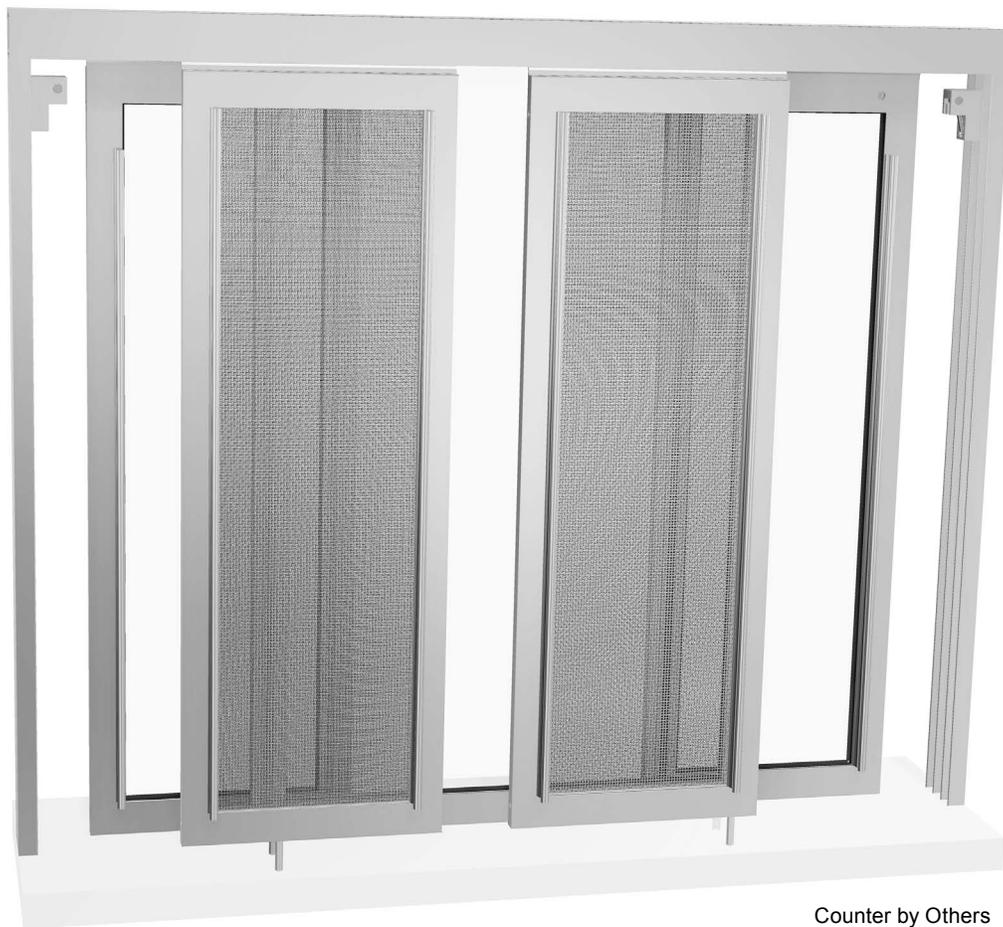

Counter by Others



2503 E. Vernon Avenue, Los Angeles, CA 90058-1826
Phone: (800) 421-6144 EXT. 7760 Fax: (800) 458-7496
crlaurence.com Email: transaction@crlaurence.com

11M0298

ORDER OF ASSEMBLY AND INSTALLATION

SPECIFICATIONS	2
PARTS LIST	3
GLASS FABRICATION	4
GLASS PREPARATION	4
SLIDING WINDOW ASSEMBLY	5 - 6
Fit Top Rail on Glass and Loosely Attach Side Rails	5
Loosely Attach Bottom Rail to Side Rails	5
Square Frames and Secure	6
Install Gasket in D1623	6
FIXED WINDOW ASSEMBLY	7
SCREEN ASSEMBLY	8
INSTALLATION	9 - 12
Install Overhead Track	9
Hang Sliding Windows and Sliding Screens	9
Install Retractable Guides	10
Install Jambs	10
Install Fixed Window	11
Install D53 Catch	12



IMPORTANT: READ THIS MANUAL THOROUGHLY BEFORE BEGINNING INSTALLATION.

Contact the CRL Transaction Hardware Department at (800) 421-6144 EXT. 7760 or email transaction@crlaurence.com for questions.

SPECIFICATIONS















Model D1025 is shown in these instructions.

NOTE: Model D1026 is designed to match storefront subframe.

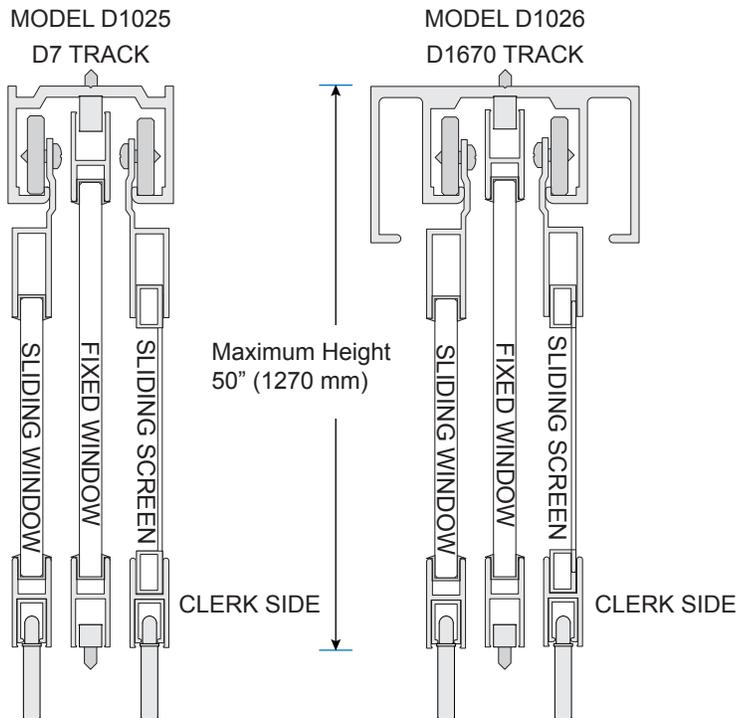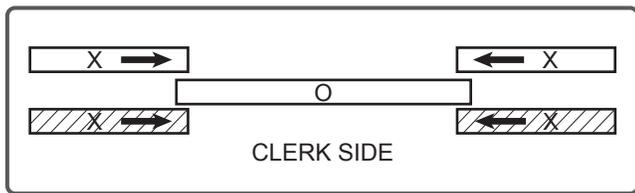

PARTS LIST

NOTE: Counter by Others
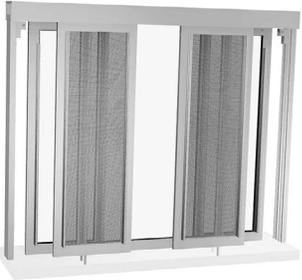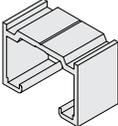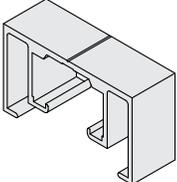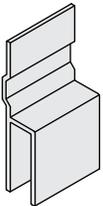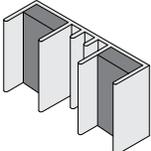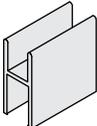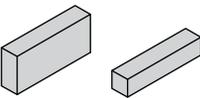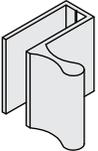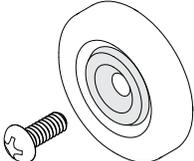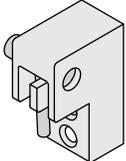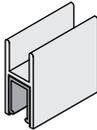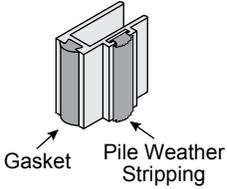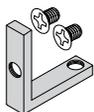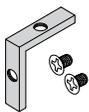
<p>D1025</p>  <p>Fawn with Screens and D7 Overhead Track</p>		<p>D1026</p>  <p>Fawn with Screens and D1670 Overhead Track</p>	
<p>D7</p>  <p>Overhead Track (D1025 Models)</p>	<p>D1670</p>  <p>Oversized Overhead Track (D1026 Models)</p>	<p>D35</p>  <p>Retractable Tip Lower Guide</p>	<p>D40</p>  <p>Sliding Panel Hanger</p>
<p>D1606</p>  <p>Double Jamb with Cushions</p>	<p>D610</p>  <p>H-Bar</p>	<p>D637</p>  <p>Upper Lower Mill Bar Stock</p>	<p>D639</p>  <p>Vertical Stile Pull</p>
<p>D679</p>  <p>Nylon Ball Bearing Roller</p>	<p>D53</p>  <p>Reversible Overhead Catch</p>	<p>D1611</p>  <p>H-Bar with Plastic Liner</p>	<p>D1623</p>  <p>Gasket Pile Weather Stripping Overlap Stile with Pile and Gasket</p>
<p>D658WS</p>  <p>Lower Frame Corner with Nylok Screws</p>	<p>D662WS</p>  <p>Upper Frame Corner with Nylok Screws</p>	 <p>Keyed Lock Not Available for Models with Screens</p>	 <p>Not Included : Fasteners for Perimeter Frame</p>

GLASS FABRICATION

Fixed Glass Width = Window Width divided by 2, minus 13/16" (21 mm)

Fixed Glass Height = Window Height minus 2" (51 mm)




Sliding Glass Width = Window Width divided by 4, minus 1-3/16" (30 mm)

Sliding Glass Height = Window Height minus 3-1/4" (83 mm)


GLASS PREPARATION

Install Gasket on Glass



- Ⓐ Fit gasket onto glass at center of the side that will become the top. Smooth to corner and cut a slit through the base of gasket. Do Not cut all the way through to dust lip rims.

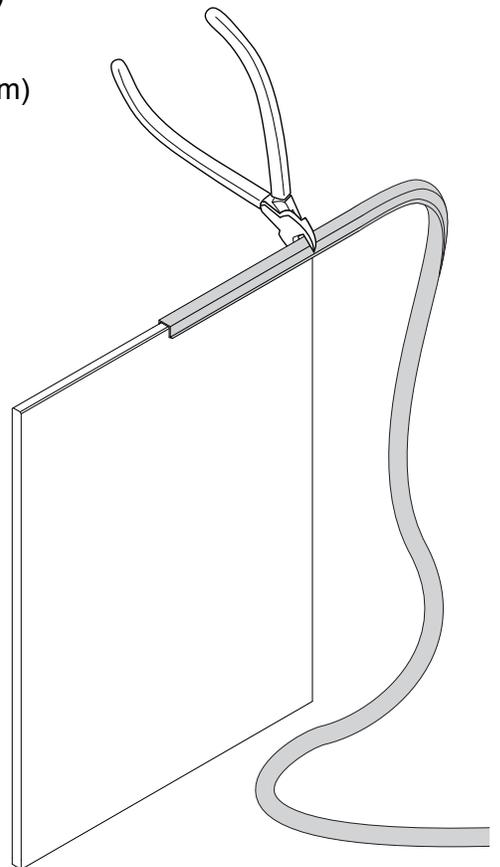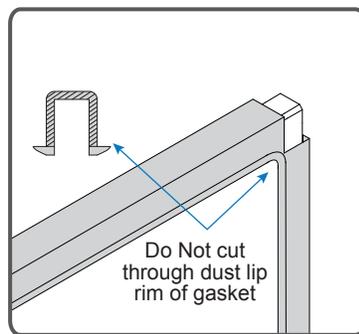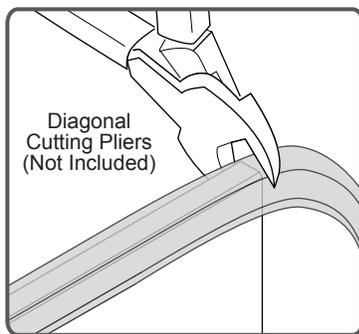

- Ⓑ Continue working gasket around edges, smoothing along each side and cutting at corner.

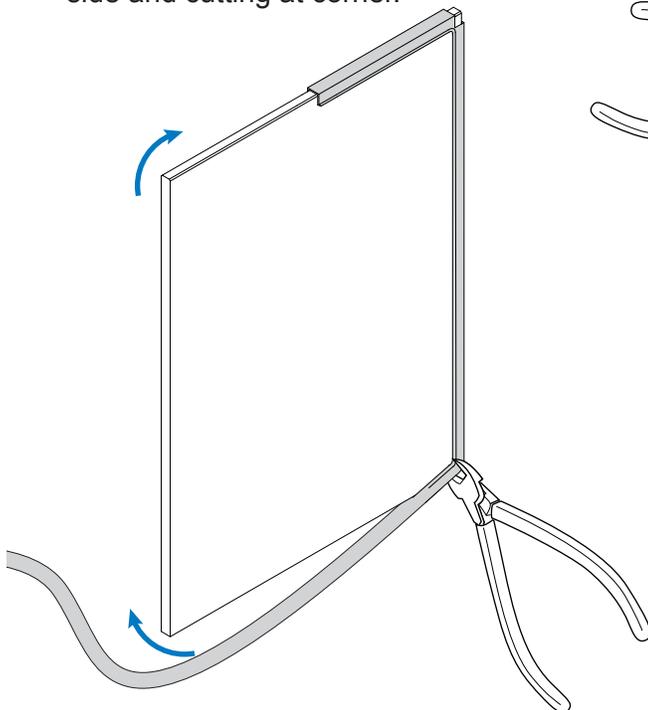


- Ⓒ Overlap ends at top and cut 1/8" (3 mm) excess. Butt ends together. Mark center of each panel.

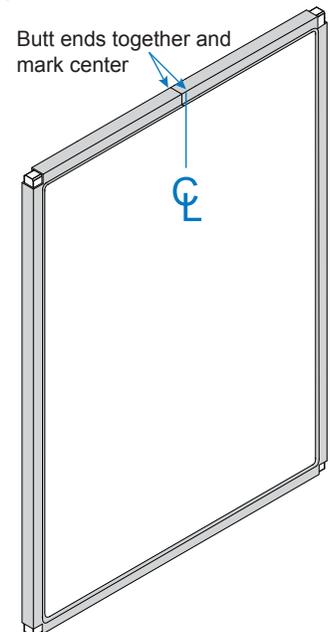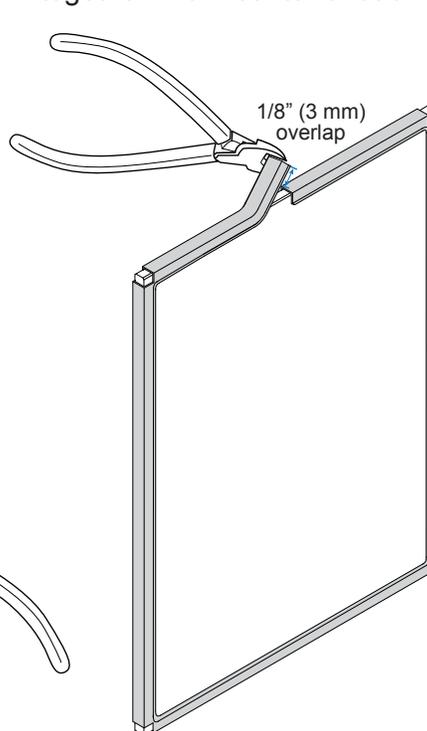


SLIDING WINDOW ASSEMBLY

1. Fit Top Rail on Glass and Loosely Attach Side Rails

Match center marks on top rail and glass.

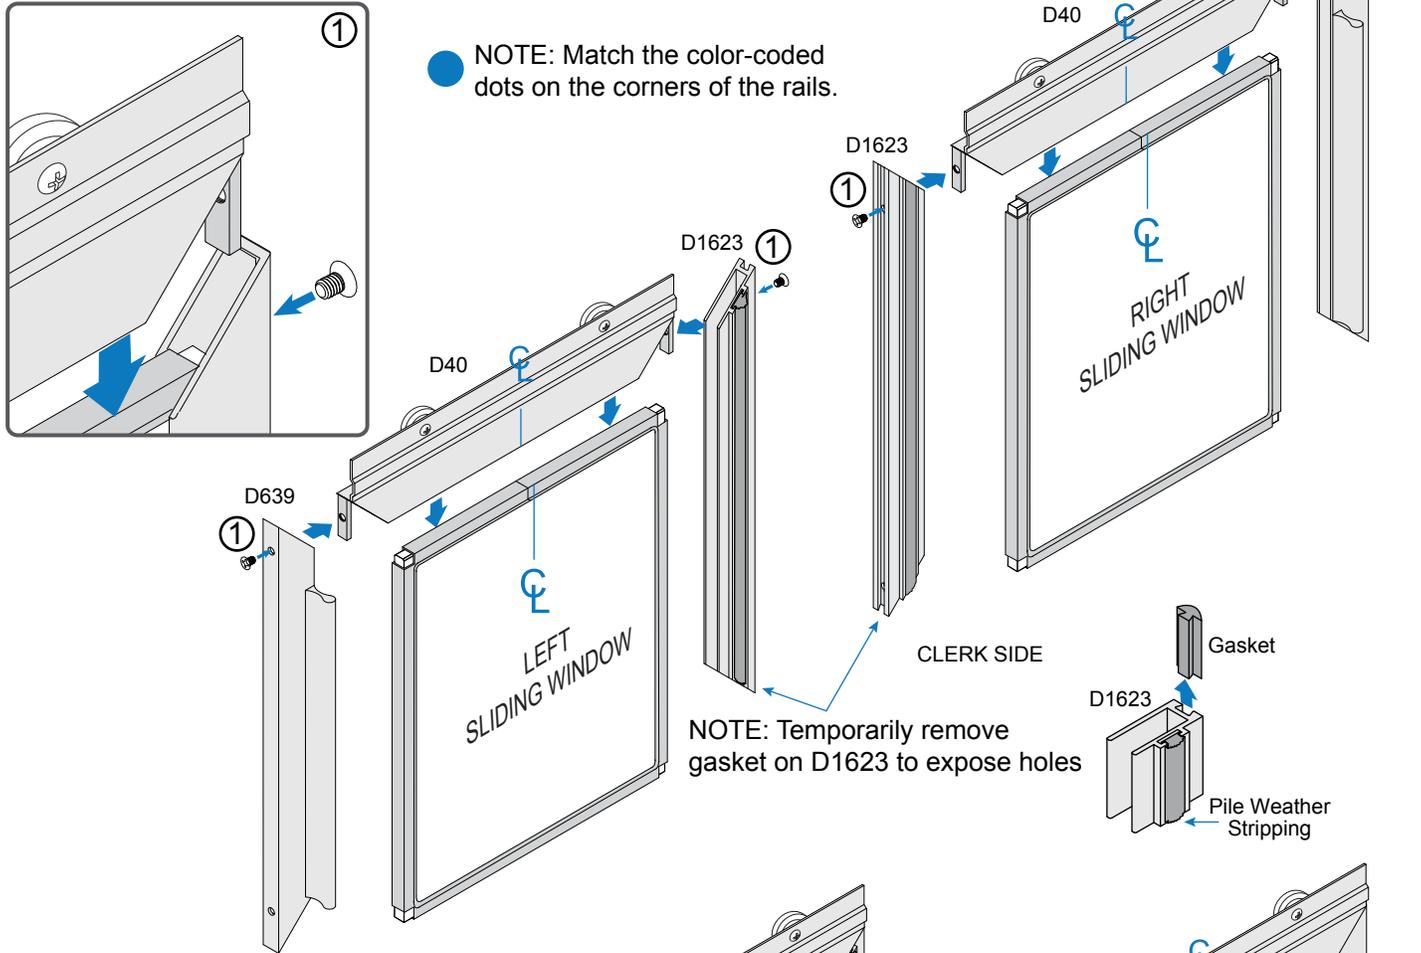

2. Loosely Attach Bottom Rail to Side Rails

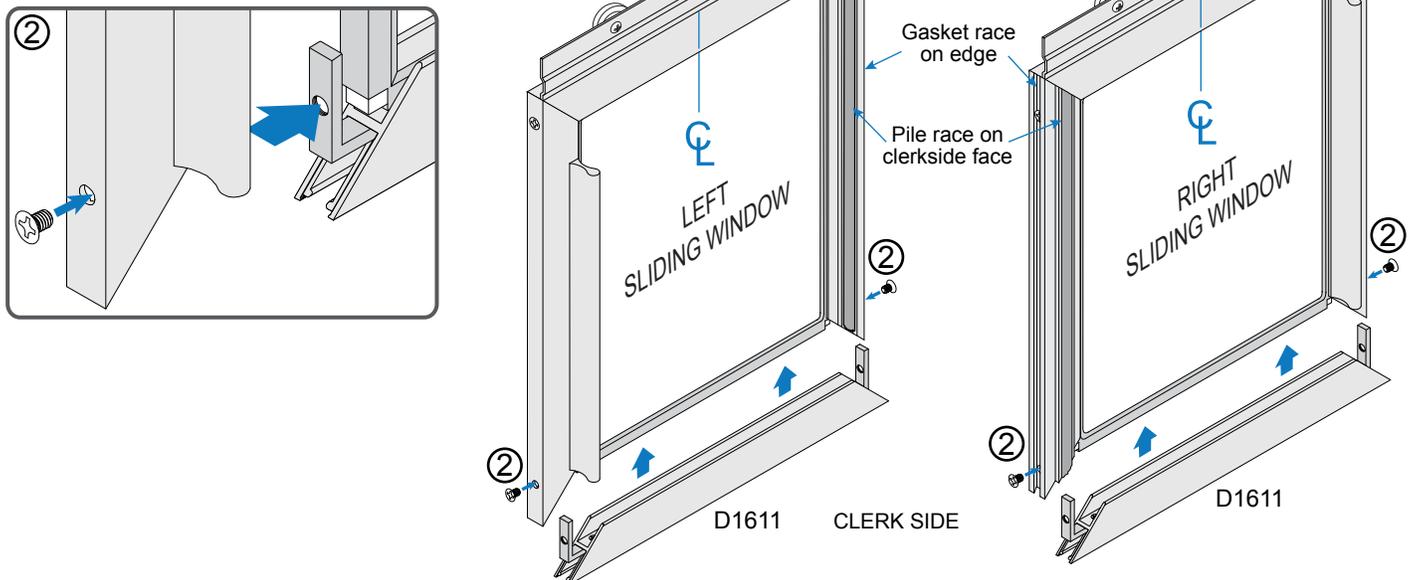


NOTE: Assemble one of each of the sliding windows shown.

SLIDING WINDOW ASSEMBLY (CONTINUED)

3. Square Frames and Secure

IMPORTANT: Tighten each corner a little at a time in rotating sequence, maintaining square condition.

Do Not completely tighten any corner until all of the other three corners are almost completely tightened.

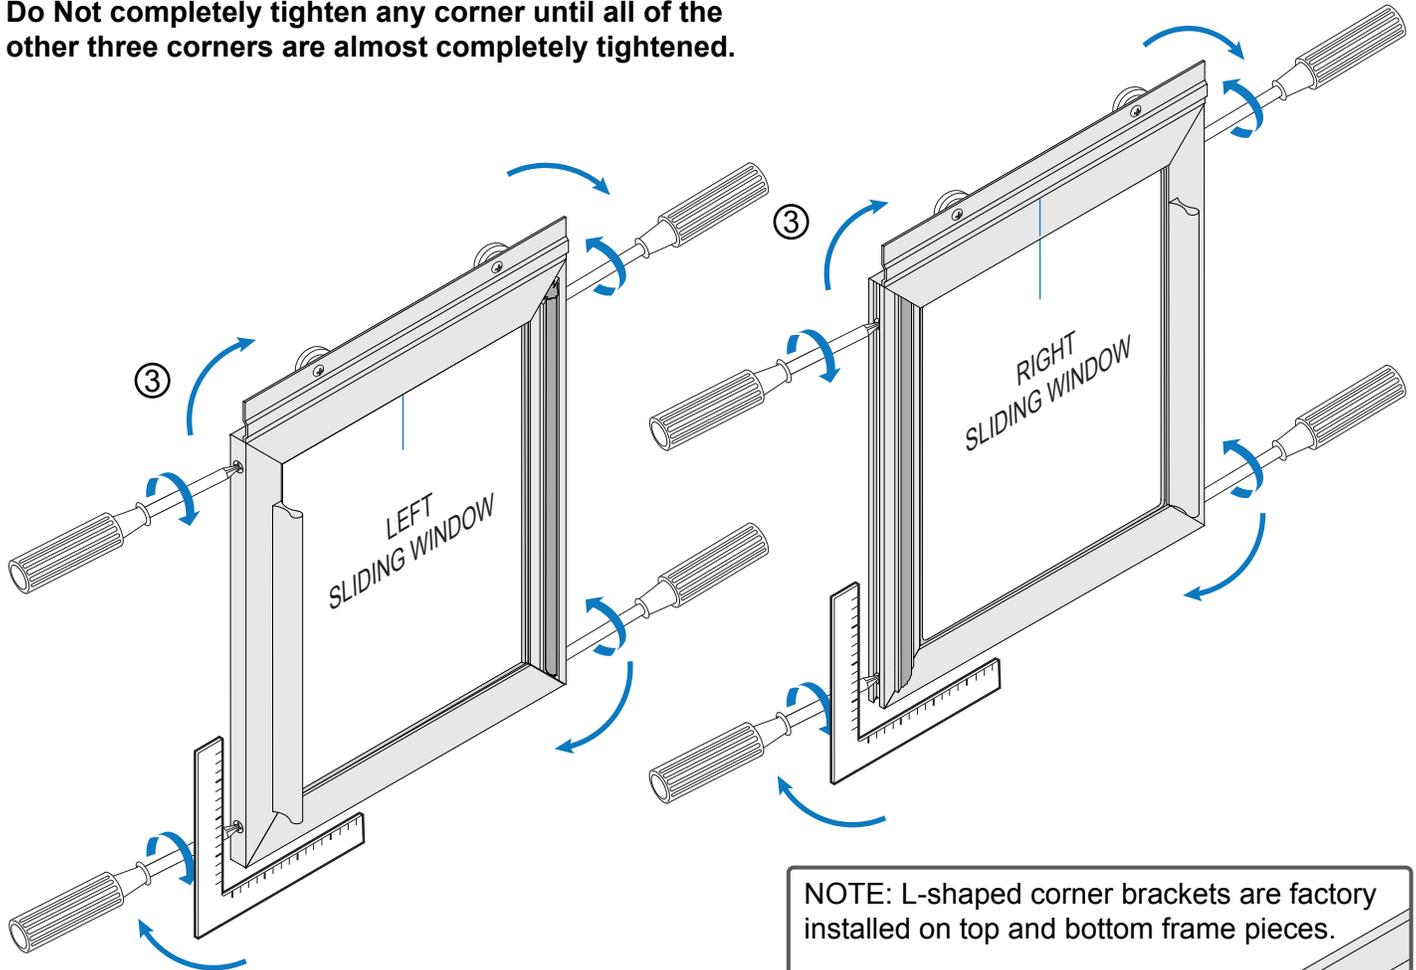


NOTE: L-shaped corner brackets are factory installed on top and bottom frame pieces.

Screw head is in glass pocket on bottom frame.

Corner Bracket

D1611 Bottom Frame

4. Install Gasket in D1623


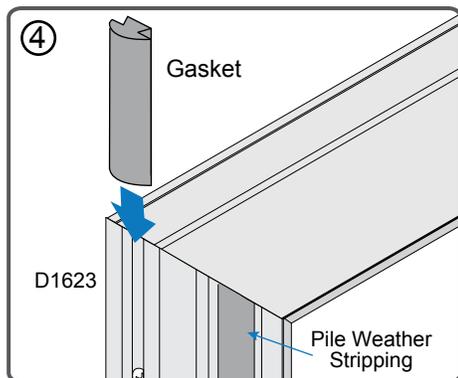


FIXED WINDOW ASSEMBLY

1. Install Gasket on Glass (See Page 4)
2. Fit Top Rail on Glass and Loosely Attach Side Rails

● NOTE: Match the color-coded dots on the corners of the rails.


3. Loosely Attach Bottom Rail to Side Rails

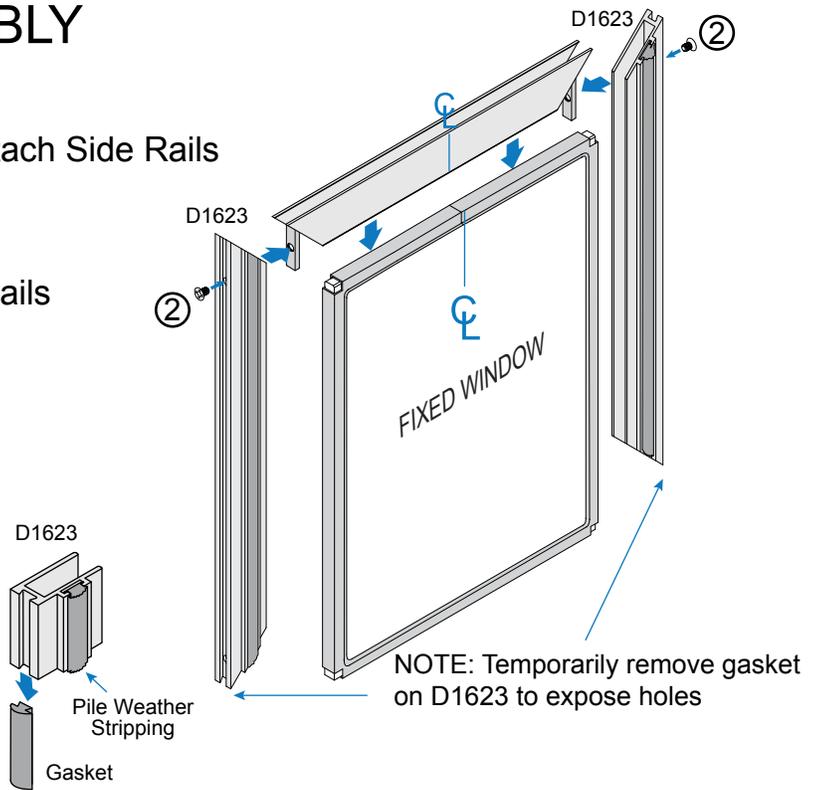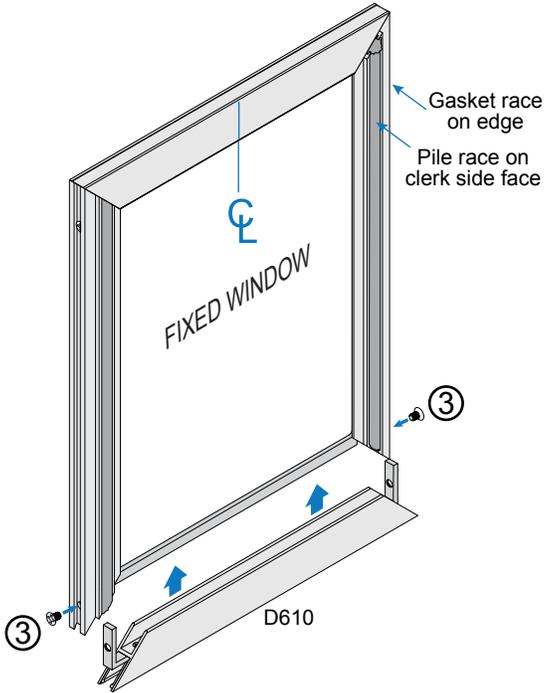



4. Square Frames and Secure

IMPORTANT: Tighten each corner a little at a time in rotating sequence, maintaining square condition.

Do Not completely tighten any corner until all of the other three corners are almost completely tightened.

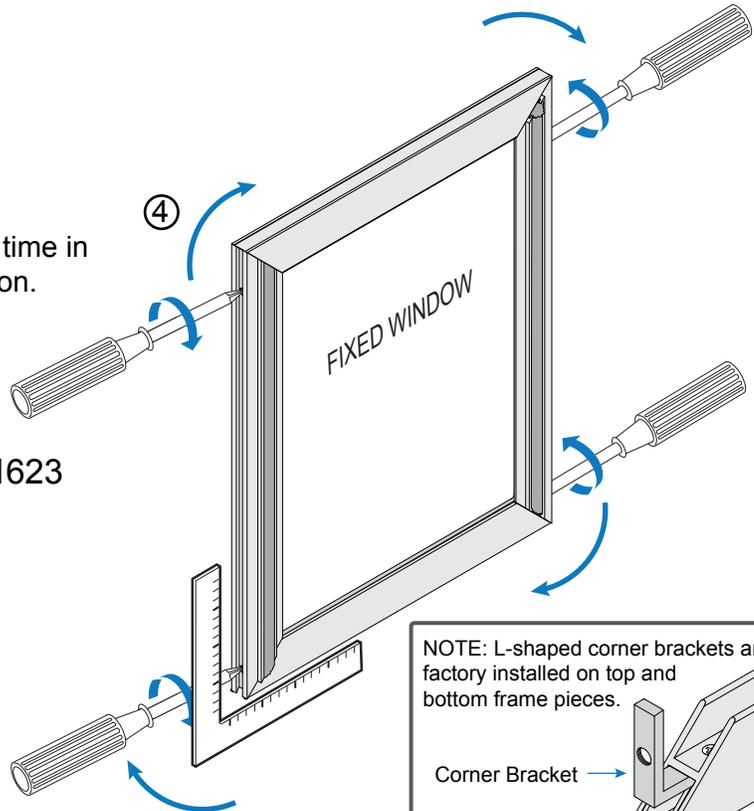

5. Replace Gasket in Outer Edge of D1623

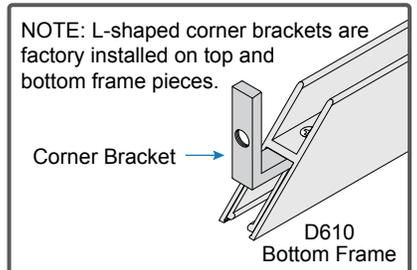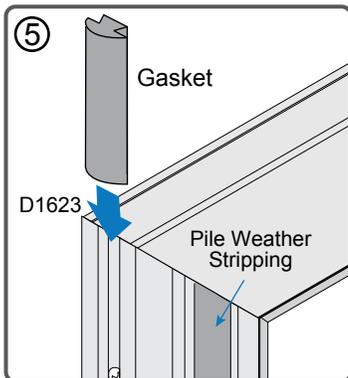


NOTE: Assemble one fixed window.


SCREEN ASSEMBLY

1. Fit Top Rail on Screen and Loosely Attach Side Rails




Match Center Marks on Top Rail and screen.

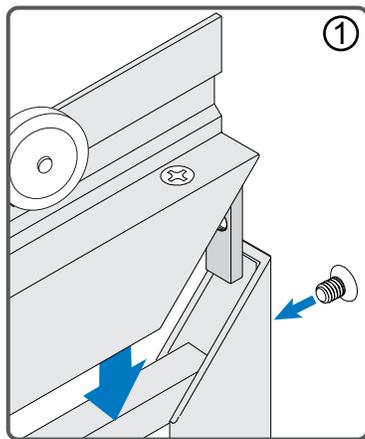

NOTE: Match the color-coded dots on the corners of the rails.

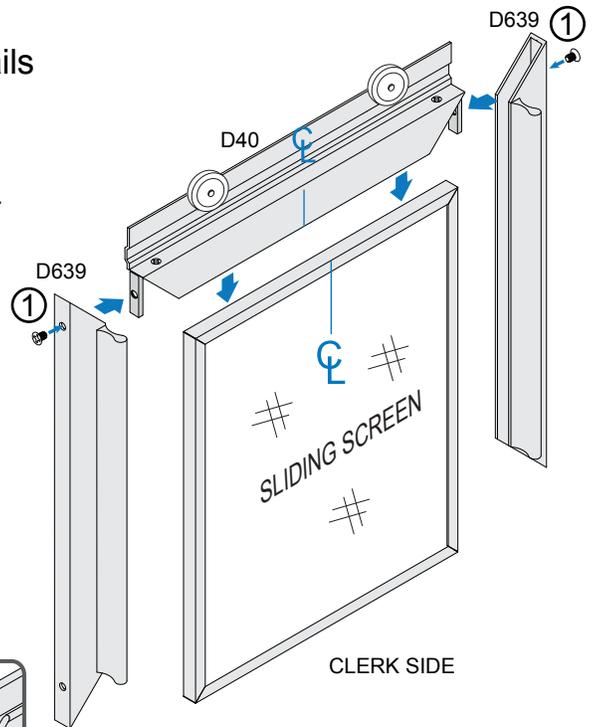

2. Loosely Attach Bottom Rail to Side Rails

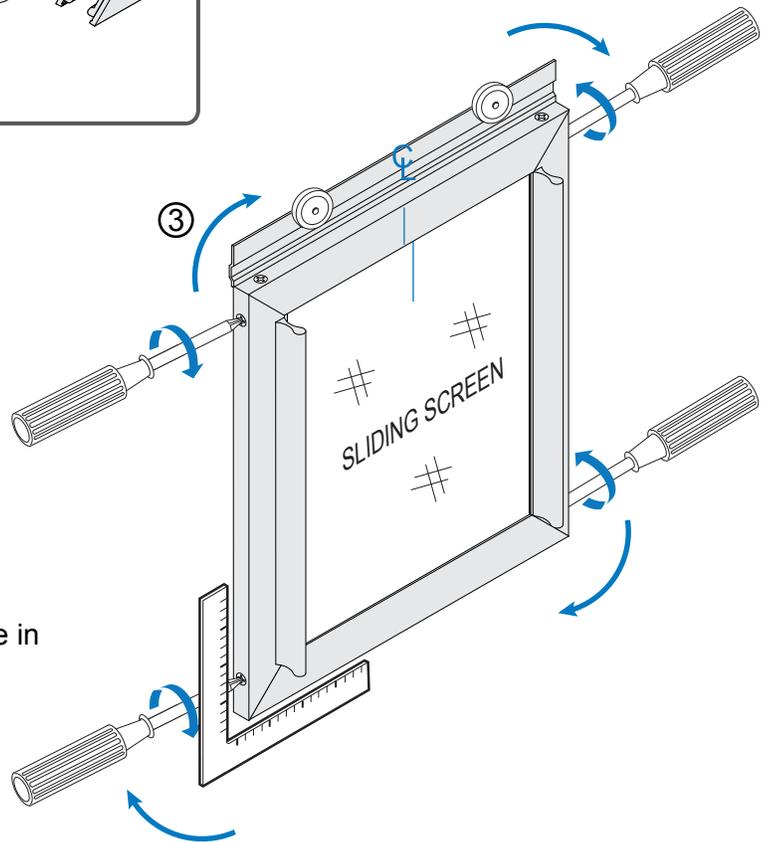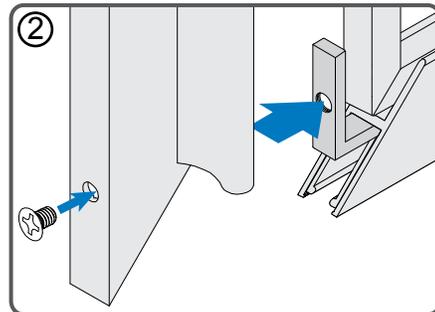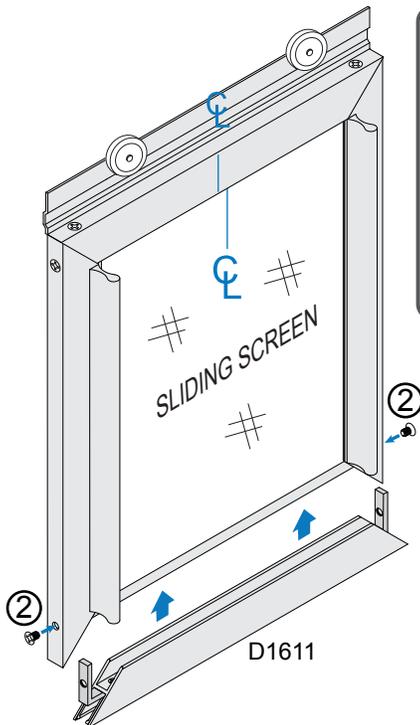

3. Square Frames and Secure

IMPORTANT: Tighten each corner a little at a time in rotating sequence, maintaining square condition.

Do Not completely tighten any corner until all of the other three corners are almost completely tightened.


NOTE: Assemble two sliding screens.

INSTALLATION


1. Install Overhead Track

Use a level and shims to install overhead track correctly in opening.

NOTE: Use fasteners appropriate for the surrounding substrate. Fasteners are not included in kit.

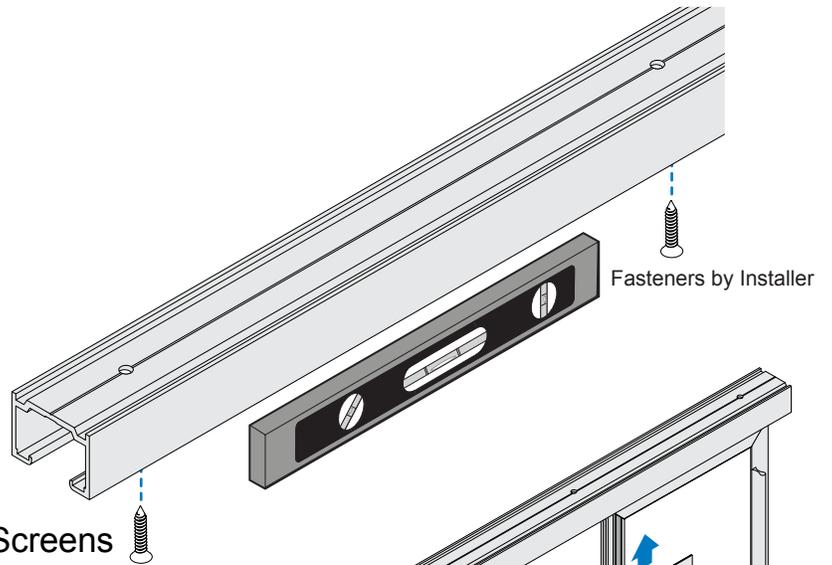


2. Hang Sliding Windows and Sliding Screens

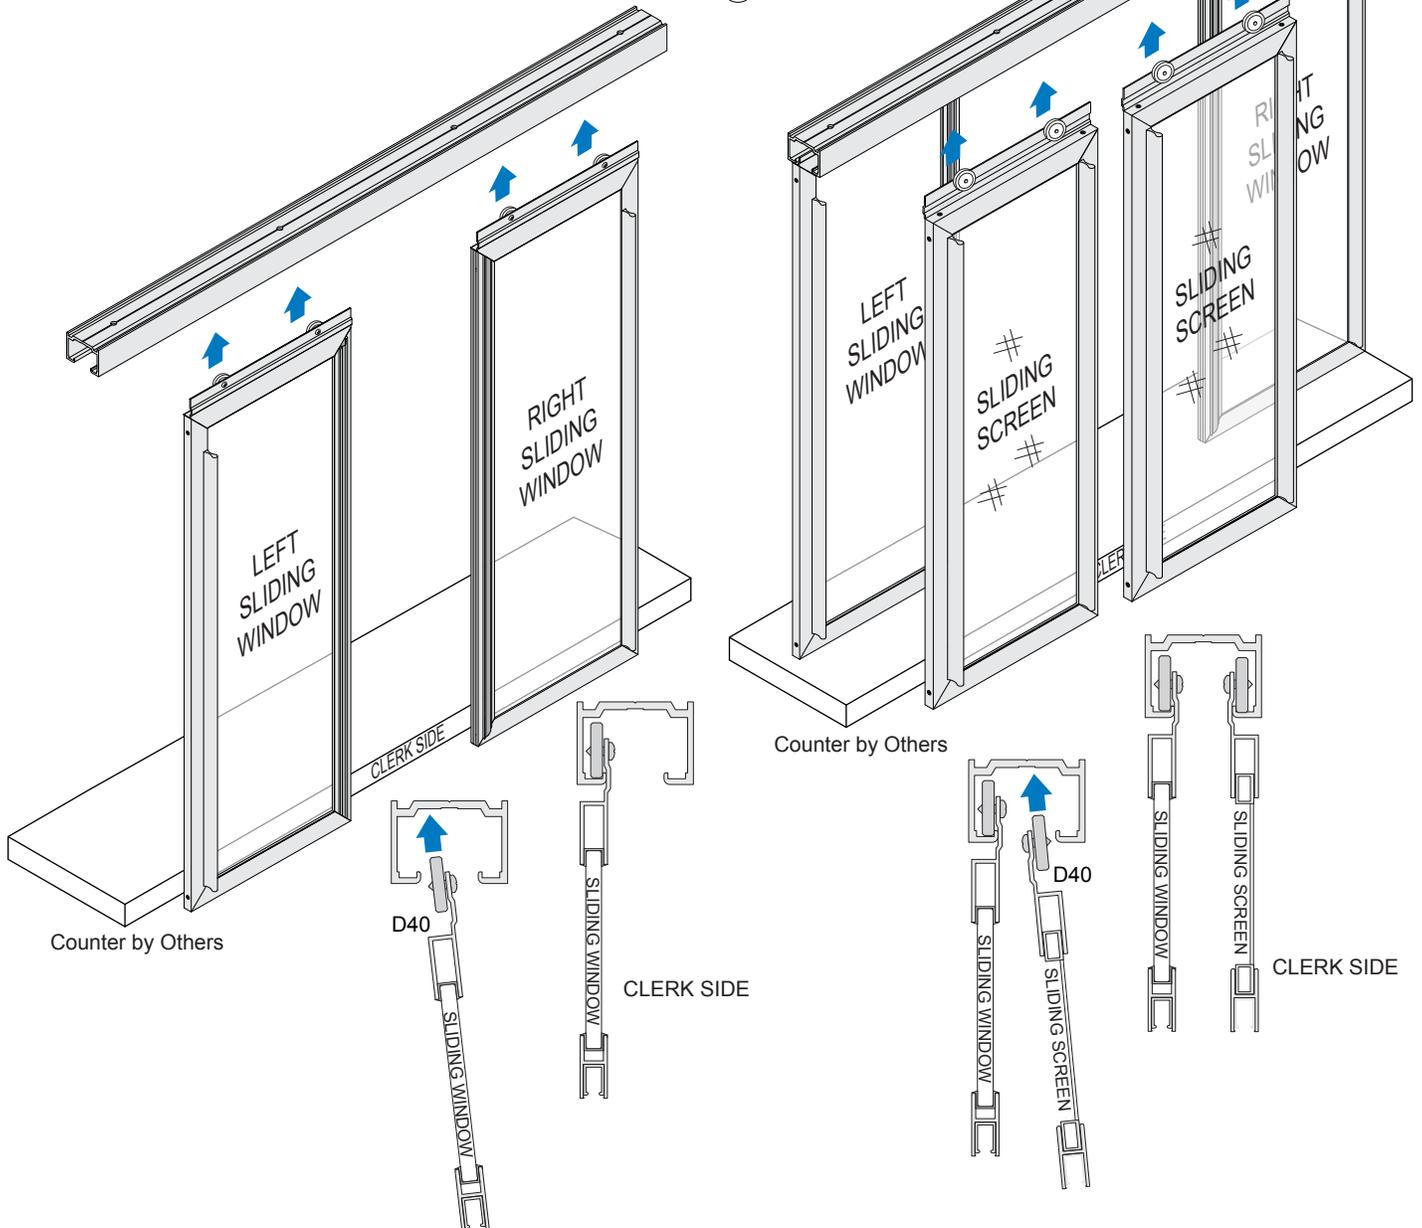


INSTALLATION (CONTINUED)

With the windows in closed position, mark placement for retractable guides. Move the windows to the open position to mark placement for the jambs. Remove the sliding windows before installing retractable guides and jambs.

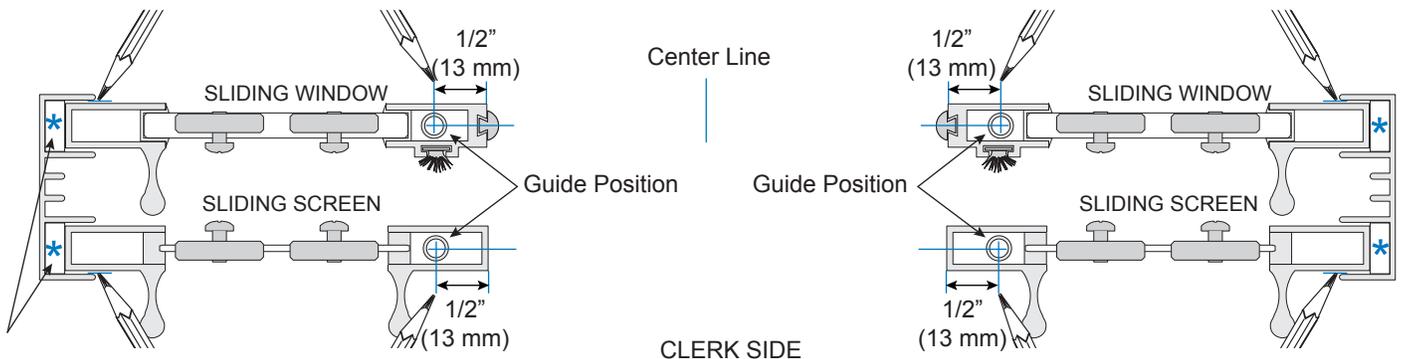


* Temporarily place Rubber Insert into Jamb to mark Guide placement.
Remove to install Jamb. Do Not remove backing until Jambs are secured.

3. Install Retractable Guides

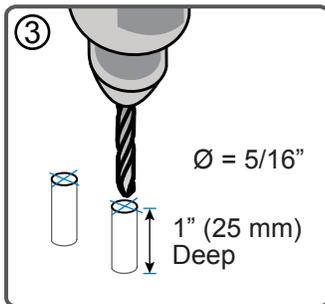


Drill 1" (25 mm) depth hole with 5/16" drill bit.

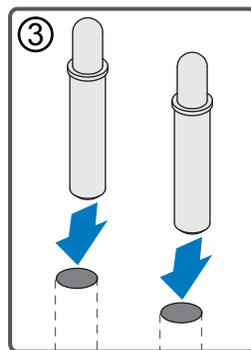


Insert a guide in each hole.


4. Install Jambs

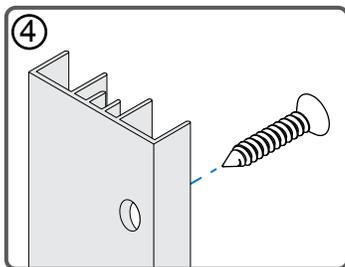

Secure using fasteners appropriate for the surrounding substrate.

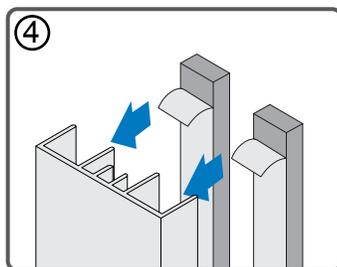

Remove backing and install rubber inserts.

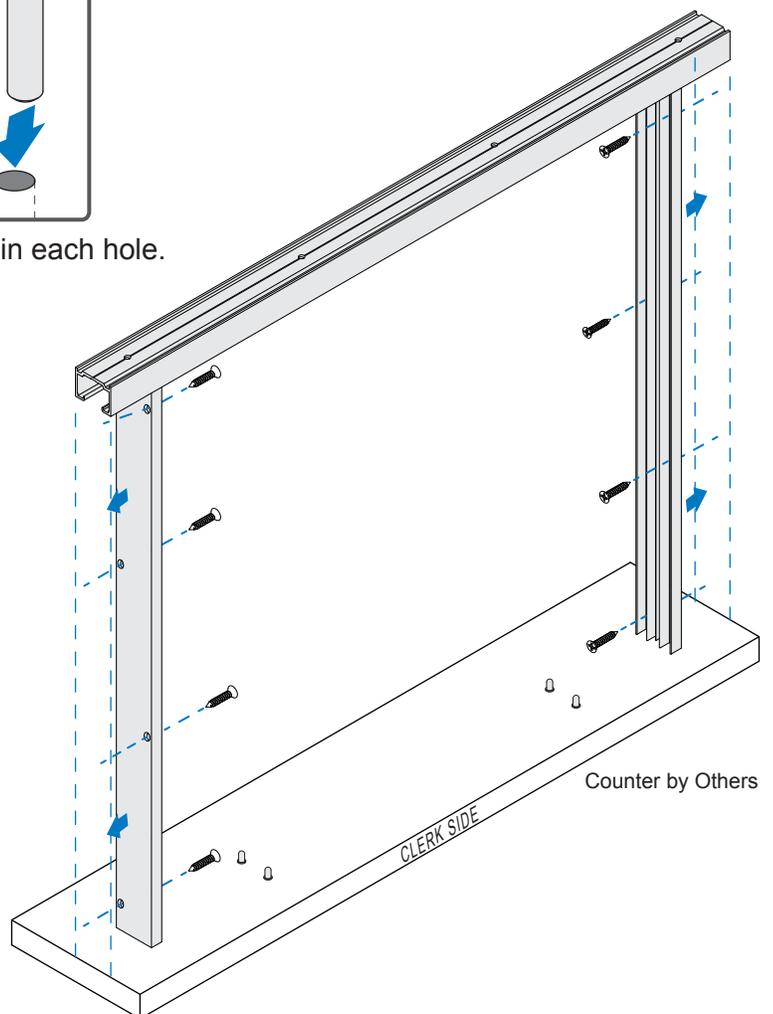



INSTALLATION (CONTINUED)

5. Install Fixed Window

NOTE: Use fasteners appropriate for the surrounding substrate. Fasteners not included.




- Ⓐ Install upper bar stock guides in groove in top track and lower bar stock guide on counter directly below.

NOTE: Center upper bar stock to top track width. Bar stock is cut 2" (51 mm) shorter than fixed window width.

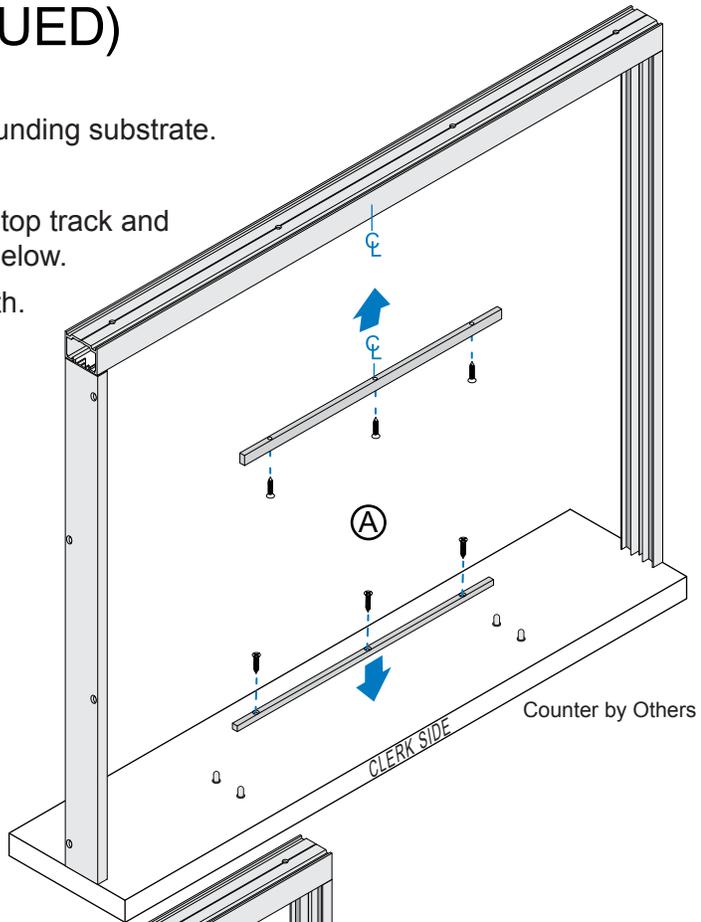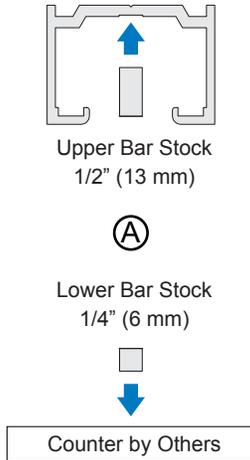

- Ⓑ Center fixed window in opening. Lift up to engage with upper bar stock.

- Ⓒ Drop down over lower bar stock.

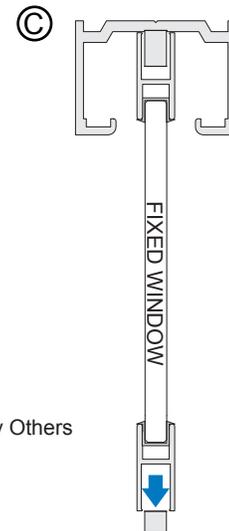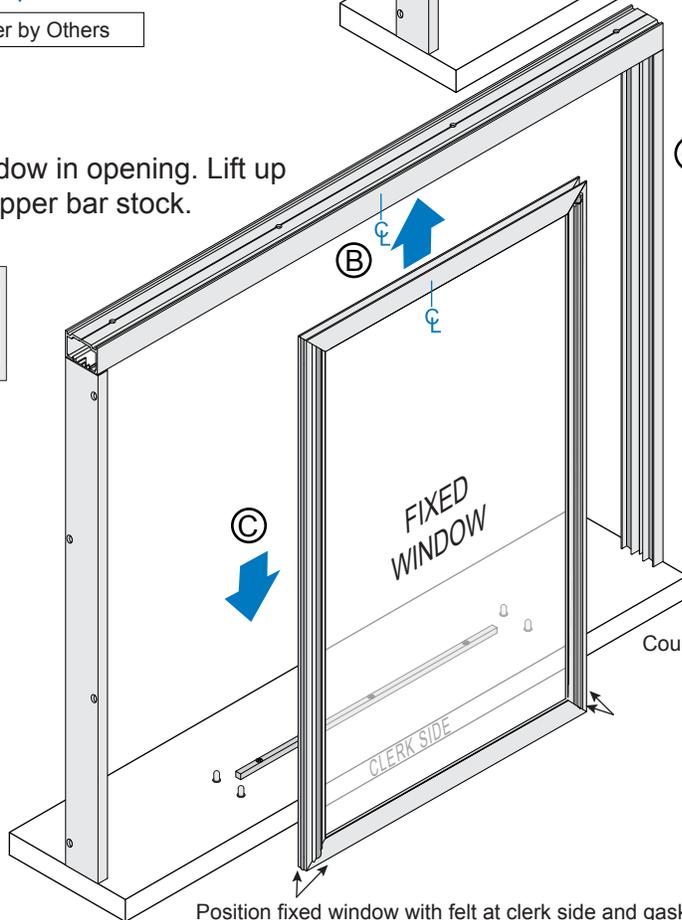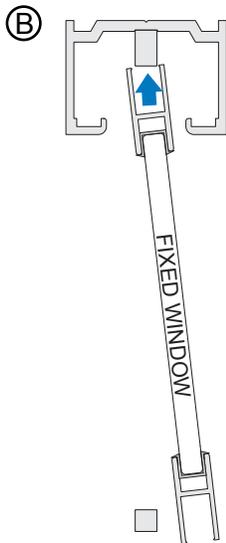


Position fixed window with felt at clerk side and gasket facing jambs

NOTE: If fixed window is too loose, apply silicone sealant to top pocket of upper fixed window frame.


INSTALLATION (CONTINUED)

6. Install D53 Catch


(A) Hang Sliding Windows and Screens. Place the D53 Catch Base in center Jamb and align with top of Sliding Window.

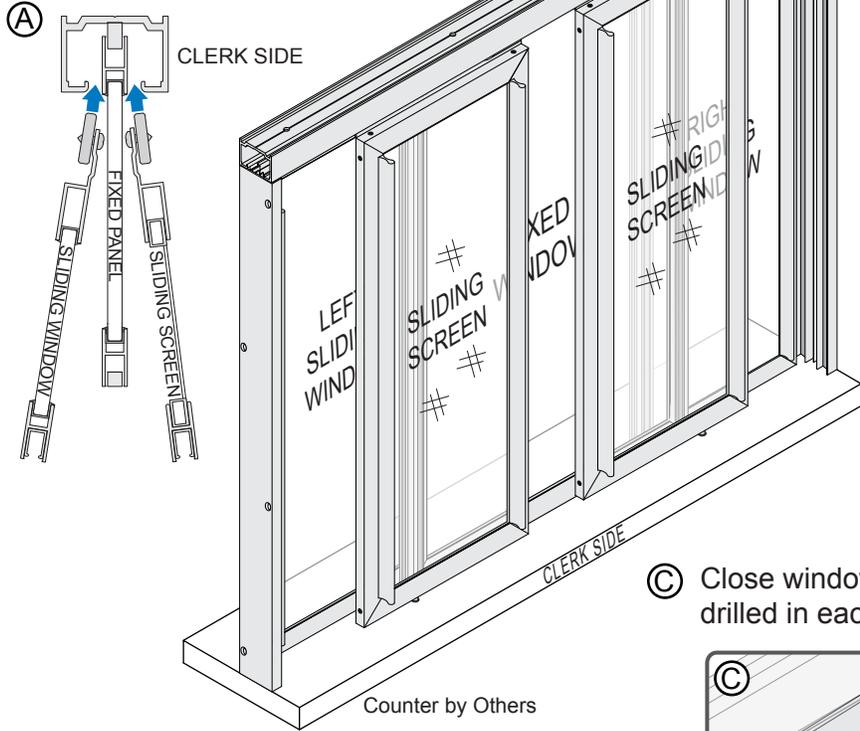

(B) Secure using fasteners appropriate for the surrounding substrate. Fasteners not included.

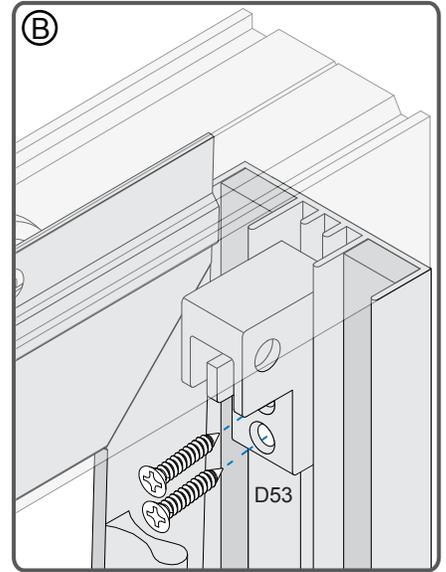


(C) Close windows to mark plunger hole location to be drilled in each Sliding Window.

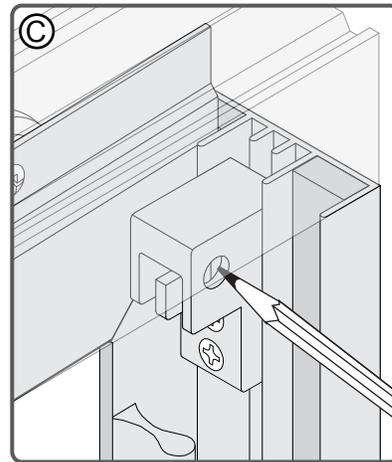

NOTE: D53 Catch is R/L reversible.

(D) Remove windows to drill 9/32" (7 mm) diameter hole, and then reinstall.

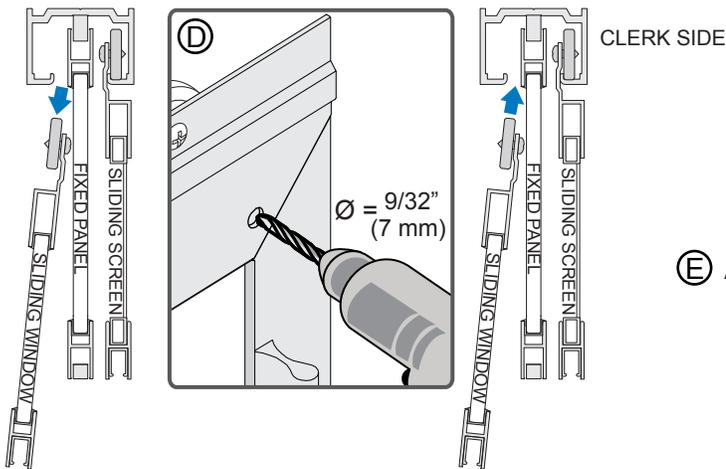

(E) Assemble D53 Catch and close window to check.

