


Sliding Window Restrictor and Security **REM-SLIDE 001**

Installation instructions:


- With the window in the closed position, place the drilling jig over the window sill at your desired ventilation position (*Refer pic 1*)
(*Maximum opening should not exceed 12.5cm at any point on the window*)
- Mark drilling jig hole with sharp pencil.

Note: Check jig for FRONT

- Drill hole using a 6.5mm or 1/4 inch drill piece
- Place REMSAFE over sill and push to lock (*Refer pic 2*)

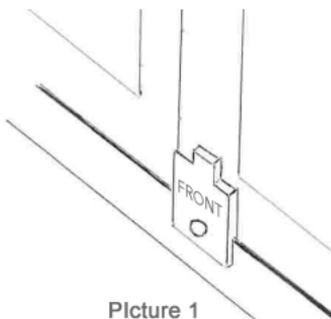

Picture 1

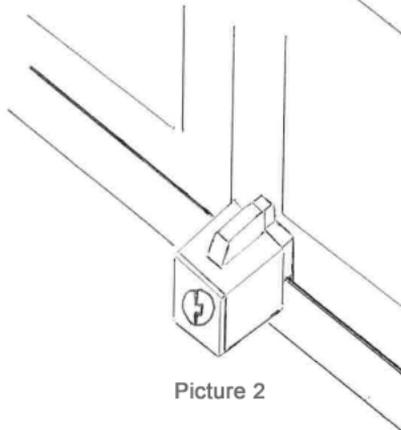

Picture 2

** For added security the REMSAFE can be installed up against the window frame in the closed position.*

Contents:

- 1 x REMSAFE
- 1 x Drilling Jig
- 2 x Keys

Made in China
Patent Pending